



START BY TAKING OFF THE ADAPTER FROM THE PLUG

2




REMOVE TOP O-RING FROM THE SENSOR FOOT MAKE SURE THE ORIENTATION PIN IS IN PLACE

3



CLIP ON PLASTIC RING IN TOP O-RING GROOVE


4

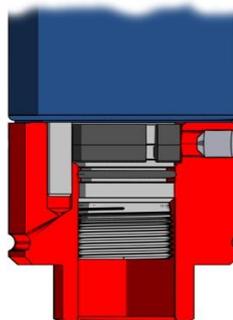

PUT ON ADAPTER AND TIGHTEN SET SCREW

5

INSERT PLUG AND TIGHTEN PLASTIC NUT BY HAND

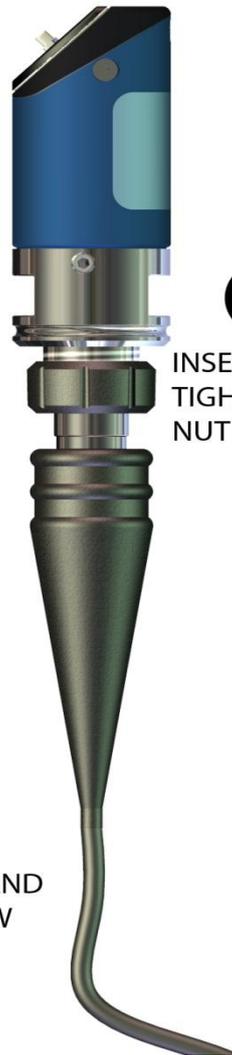

### Aanderaa Data Instruments AS

Sanddalsringen 5b, P.O. Box 103 Midtun, 5828 Bergen, Norway

Tel: +47 55 60 48 00 Fax: +47 55 60 48 01

email: [aanderaa.info@xylem.com](mailto:aanderaa.info@xylem.com) [www.aanderaa.no](http://www.aanderaa.no)